


## Electric Grooming Tub

### Model: PT-1E

The electric stainless steel bath-tub is designed according to the pet's specific bathing requirements. Either the tub size or the specific functions are all help to make the bathing job easy and time-saving. The bath-tub also has following advantages

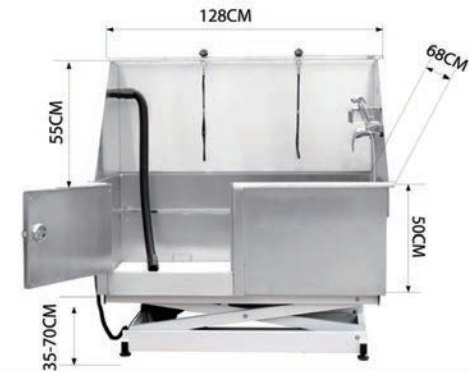

#### Features:

- 1) It adopts 304 stainless steel, it makes the bath-tub not only has good sealing and solid, but also easily to clean and maintenance.
- 2) The bath-tub adopts key-lock door. The height of the bath-tub is controlled by "foot controller".
- 3) There are two-section plants on the bottom. User can move the plate suitable for the small pets.
- 4) It's equipped with three-side barriers which can prevent water spills on the floor and keep the grooming room clean and tidy.
- 5) Both sides barriers equipped with pre-cut holes for the water blower. The users can dry the pets directly after bath.
- 6) The bottom structure for the bath-tub is "X" shape, which is driven by electric pump. The lifting height is from 35cm to 70cm.
- 7) The feet equipped with regulating screws which is for drainage after bath.